
INSTALLATION INSTRUCTIONS WP65-C-LED LED Wall Light

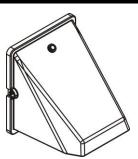

PRECAUTIONS:

Read these instructions carefully before attempting to install the fixture, and keep for future reference. Before beginning installation or service, disconnect the power by turning off the circuit breaker. Turning the power off by using the light switch is not sufficient to prevent electrical shock. All work should be performed by a qualified electrician. This fixture is for outdoor use and should not be used in areas with limited ventilation or high ambient temperatures. This product must be installed in accordance with the applicable installation codes and ordinances by a person familiar with the construction and operation of the product and the hazards involved.

IMPORTANT: In order to comply with established electrical code, the installer must seal the area around the mounting plate and the wall with silicone sealant to provide a watertight seal.

AVERTISSEMENT:

S'assurer que toute alimentation possible est COUPÉE avant de commencer l'installation ou l'entretien. Tout le câblage doit être fait par un électrician vertifié.

INSTALLATION:

Direct wall mounting to a recessed box:

- 1. Remove the rear mounting plate by loosening the two allen head screws from the side of the plate on the rear of the fixture.
- 2. Fasten the mounting plate to the recessed outlet box.
- 3. Splice the outlet box wires to the leads from the fixture, matching black to black (hot), white to white (neutral), and green to green (ground).
- 4. Push the splices into the outlet box.
- 5. Align the fixture against the mounting plate. Be careful to not pinch the wire leads.
- 6. Secure the fixture by tightening the two allen head screws to lock the mounting plate.
- 7. For wet locations, caulk between the rear housing and the mounting surface to prevent water from entering the fixture from behind.
- 8. The LED light engine is preinstalled and prepositioned. DO NOT OPEN the unit. DO NOT TOUCH THE SURFACE OF THE LEDS.

CAUTION: This fixture must be mounted in the LENS DOWN position.

WIRING:

LED units should be operated from 120V to 240V. No additional tap wires are provided. Photocontrol is optional. With photocontrol, supply 120V only.

TROUBLE SHOOTING CHECKLIST: If the light does not work.

Check your power source.

Check electrical connections.